

Hardware Installation


The Microscan only works together with Immersion's 6DOF MicroScribe G2 and MX series - other devices are not supported.

Mounting the Microscan to MicroScribe G2 device

1. Unscrew the MicroScribe's stylus
2. Slide the MicroScan on the MicroScribe's shaft until the end of the shaft.
3. Tighten the socket screws with the supplied hex wrench to fix the MicroScan to the MicroScribe.
4. Screw on the stylus to the axis

Mounting the Microscan to MicroScribe MX device

1. Slide the MicroScan on the MicroScribe's shaft until the MicroScan's front housing justifies with the chamfer of the MicroScribe's shaft
2. Tighten the socket screws with the supplied hex wrench to fix to MicroScan to MicroScribe

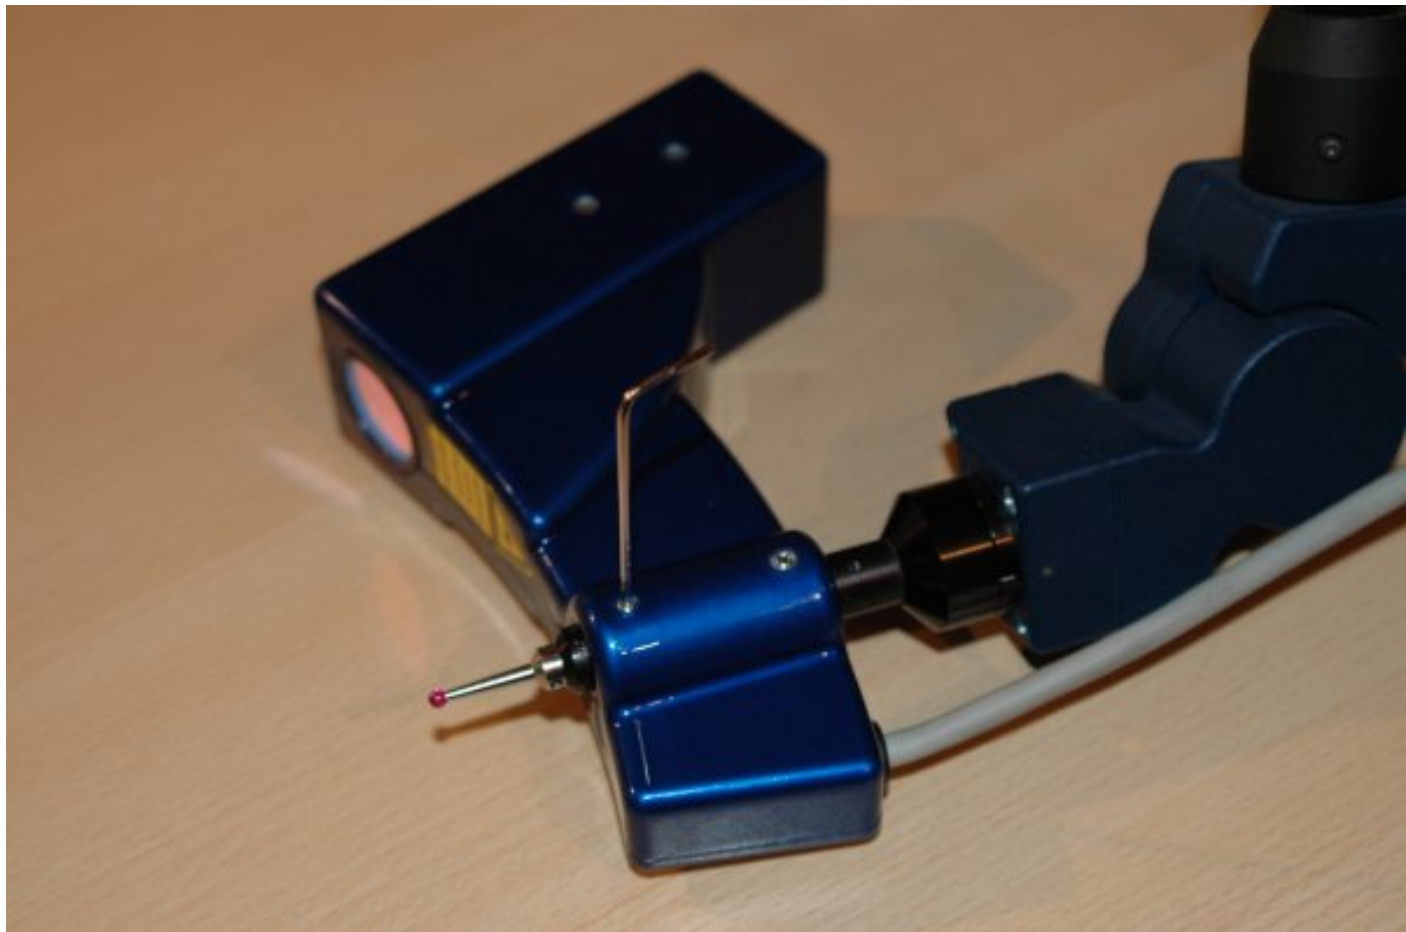

Do the following to connect your MicroScan system to your PC

1. Unplug the MicroScribe's USB Cable
2. Plug in the power supply into the MicroScribe (**Important:** do this before connecting the

USB cable or accessory port connector)

3. Plug in the MicroScan's accessory port connector into the MicroScribe's accessory port (the Microscan laser line emitter should be activated at this moment)
4. Connect the MicroScan's splitter box with the supplied IEEE1394 cable to your computer's IEEE1394 port
5. Connect the MicroScribe to your PC with the USB cable supplied with your MicroScribe